

GB



NORTH POLE RAILWAY

BATTERY-OPERATED
VILLAGE TRAIN WITH TRACK

Owner's Manual

~READ THIS MANUAL BEFORE YOU START ANY ASSEMBLY~

CONGRATULATIONS!

Thank you for purchasing the North Pole Railway. This booklet covers all procedures of how to set up your Train Set. Please read it before you start any assembly or operation. Thank you and Enjoy!

 
INDEX

CONTENTS	P.2
TRACK ASSEMBLY	P.3
BATTERY INSTALLATION	P.4
TRAIN OPERATION	P.6
TROUBLE-SHOOTING	P.10


CONTENTS

Your North Pole Railway comes with the following components:


- 1-Piece Locomotive with working headlight, with on/off sound button, with on/off push button
- 1-Piece Presents Car
- 1-Piece Passenger Car
- 1-Piece Snow Globe Car
- 1-Curved Track with Power ► / ■ (Run/Stop) Slide Switch
- 4-Straight Tracks (10")
- 7-Curved Tracks

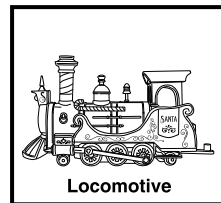

Locomotive

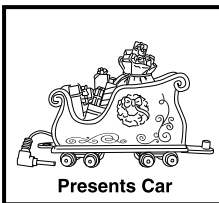 



Presents Car

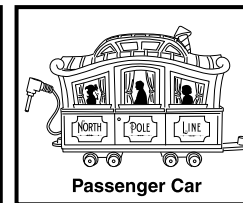 


Passenger Car



  Snow Globe Car

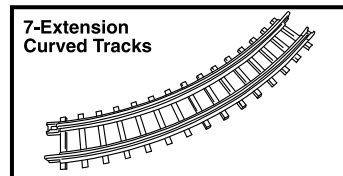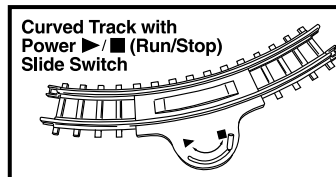

7-Extension
Curved Tracks


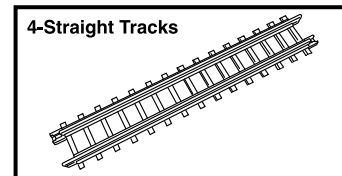 


4-Straight Tracks


TRACK ASSEMBLY

MAKE SURE YOU ARE SETTING UP YOUR RAILROAD SECTIONS ON A FLAT AND FIRM SURFACE FOR SMOOTH AND PROPER RUNNING OF YOUR "NORTH POLE RAILWAY".

  1. Join Tracks together (Dia. 1a & Dia. 1b) one at a time. Each track section has a rail joiner at opposite sides. Snap rail joiners firmly.

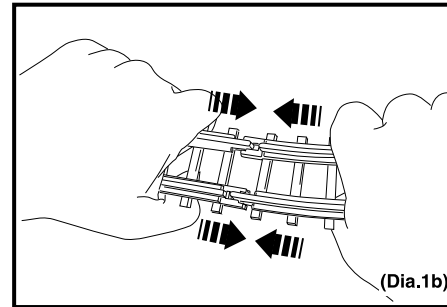
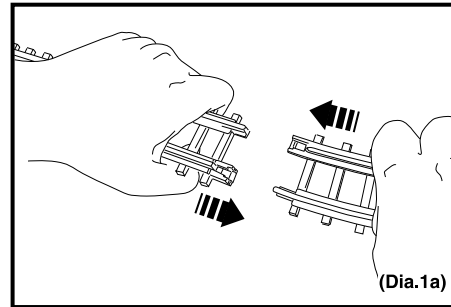


2. Check all joints to make sure the tracks are flush and level. There should be no bumps or distortions.

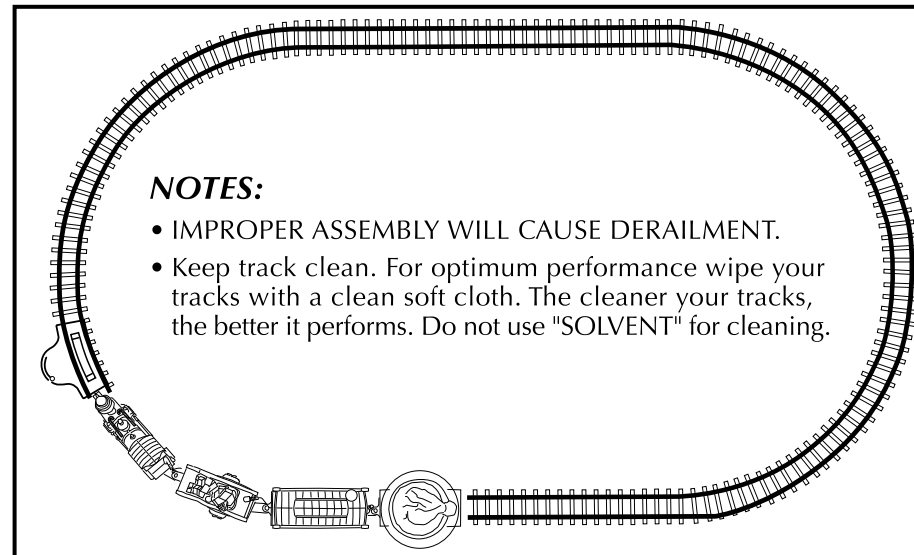


BATTERY INSTALLATION 1

  1. Press the front in (Dia. 2a) and pull outer cover up (Dia. 2b) to take outer cover off of Presents Car and Passenger Car.

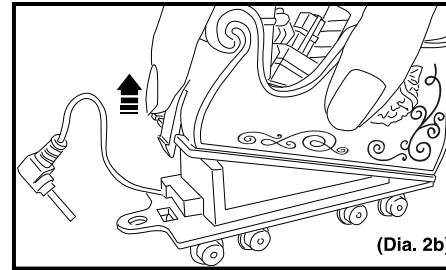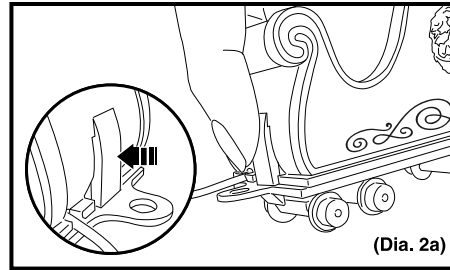


 
2. Insert 1-AA battery in the Passenger Car and 2-AA batteries in the Presents Car (Dia. 2c).

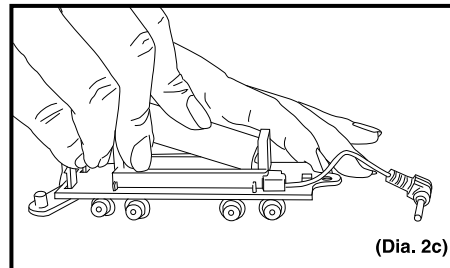

CAUTIONS:


- BATTERY-OPERATED.
- 3 NEW BATTERIES HAVE UP TO 3 HOURS OF NON-STOP RUN TIME.
- SPEED OF TRAIN MAY BE AFFECTED BY USING USED OR OLD BATTERIES.
- (3) "AA" SIZE 1.5 V BATTERIES REQUIRED.
- BATTERIES NOT INCLUDED.
- REMOVE BATTERIES IF CONSUMED OR IF PRODUCT IS LEFT UNUSED FOR A LONG TIME.
- DO NOT MIX OLD AND NEW BATTERIES.
- DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL CADMIUM) BATTERIES.
- NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
- BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
- EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE PRODUCT.
- THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.

  3. Put outer cover back on both Passenger Car and Presents Car (Dia. 3a & Dia. 3b).

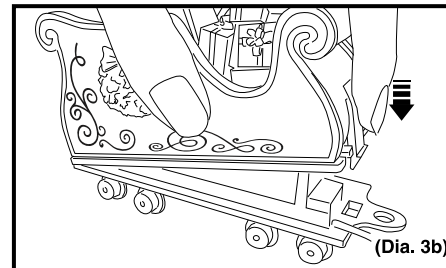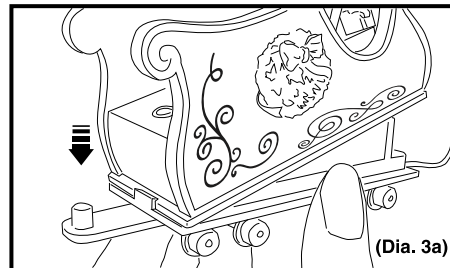


BATTERY INSTALLATION 2

 
1.

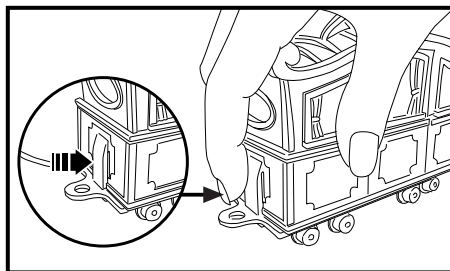

 
4.

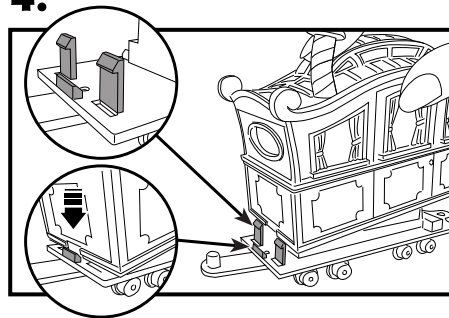

 
2.

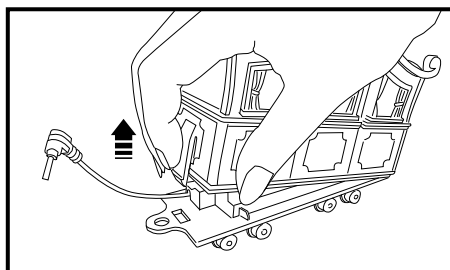

 
5.

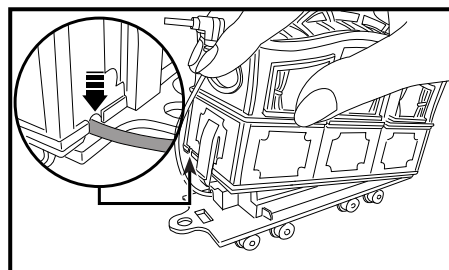

 3.


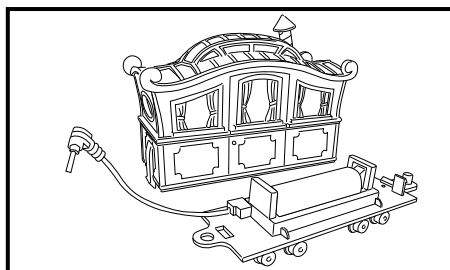


 6.


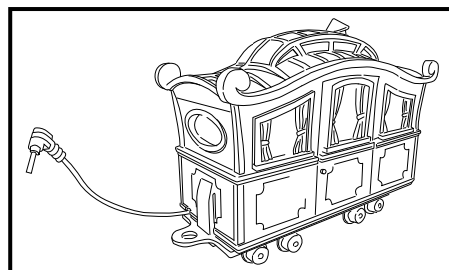


TRAIN OPERATION:

 
 
1. Make sure 3 new AA batteries are in Passenger Car and Presents Car.
2. Make sure the Curved Track with Power ► / ■ (Run/Stop) Lever is switched to ■ "Stop" (Dia. 4) and place the Locomotive behind the power ► / ■ (Run/Stop) Switch Track (Dia. 5).

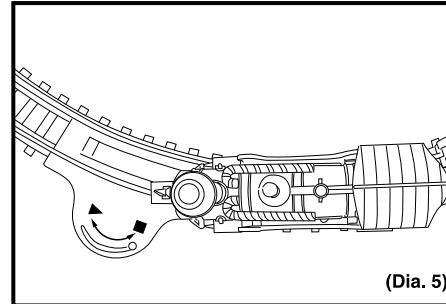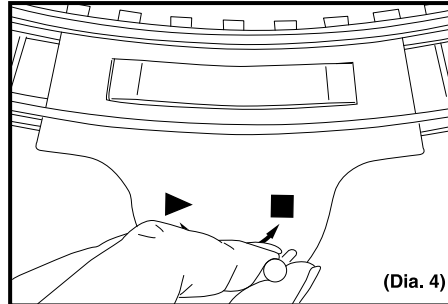

  
3. Place the Presents Car behind the Locomotive and Carefully couple the Locomotive and Presents Car by placing the Presents Car circle coupler over the Locomotive's mating coupler (Dia. 6a). Then attach the plug from the Presents Car on the Locomotive (Dia. 6b).

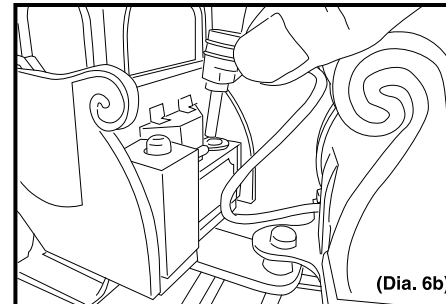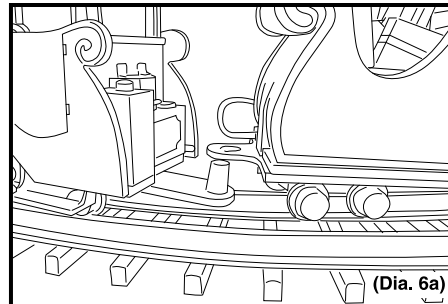

 
 
4. Place the Passenger Car behind the Presents Car. Carefully couple the Passenger Car to the Presents Car by placing the Passenger Car circle coupler over the Presents Car's mating coupler (Dia. 7a). Then attach the plug from the Passenger Car to the Presents Car (Dia. 7b).

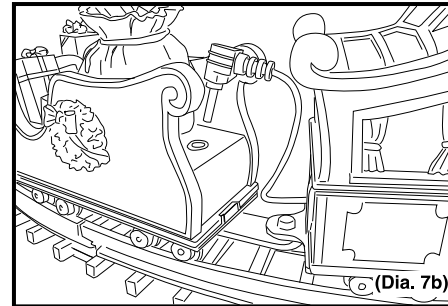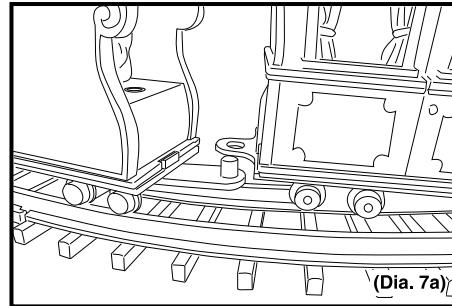



5. Attach the circle coupler of the Snow Globe Car over the Passenger Car's mating coupler (Dia. 8a).

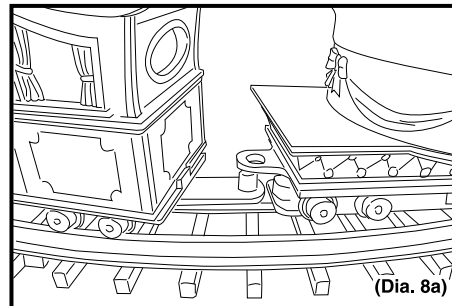 

  6. Make sure all four cars on track are behind the Power ► / ■ (Run/Stop) Switch Base and directly behind the ► / ■ (Run/Stop) Switch (Dia. 9a). Ensure that all wheels are set properly on the tracks before operating your train (Dia. 9b).

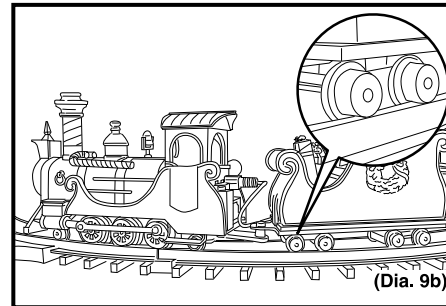
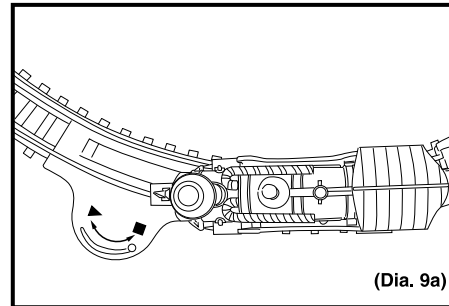


  7. To turn ON the train:
- Press the Red on/off button on the Locomotive (Dia. 10a)
 - Slide the ► / ■ (Run/Stop) Switch from the Curved Track to ► (Run) (Dia. 10b)

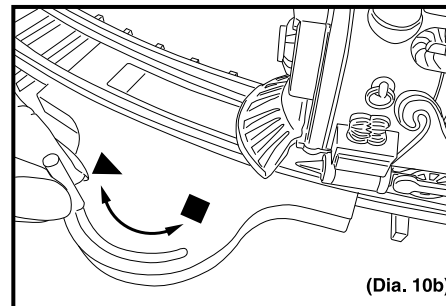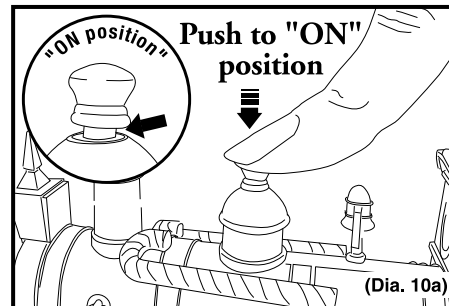



8. To STOP the train:

  - a. Slide ► / ■ (Run/Stop) Switch to ■ (Stop) before the train crosses the Curve Track with ► / ■ (Run/Stop) Slide Switch (Dia. 11a).
- b. Press the Red on/off button on the Locomotive (Dia. 11b).

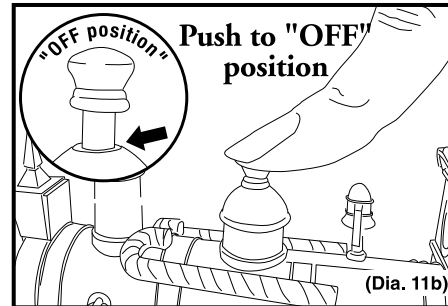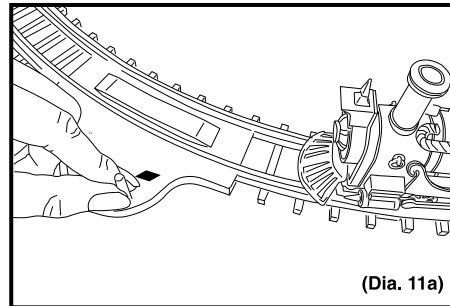

9. To turn sound ON by pressing the Black on/off sound button at a corner of the cab outside (Dia. 12a).

  10. To turn sound OFF by pressing the Black on/off sound button (Dia. 12b).

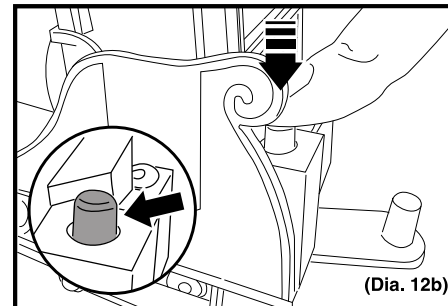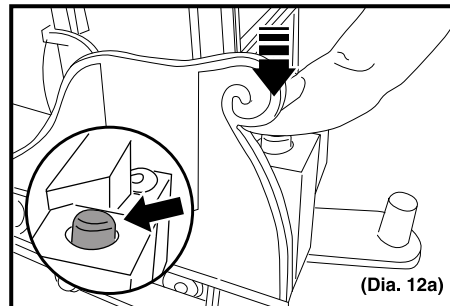

CAUTIONS:

- PLACE TRAIN ON TRACKS IN CORRECT DIRECTION.
- DO NOT LEAVE TRAIN RUNNING UNATTENDED.

TROUBLE-SHOOTING

1. IF THE TRAIN DOES NOT RUN

- a. Check to see that the plugs on the Locomotive and Present Car are securely plugged in.
- b. Check to see that all wheels on all four cars are set properly on the tracks.
- c. Check to see all rail joiners are assembled properly.
- d. Check to see that the on/off button on the Locomotive AND the ► / ■ (Run/Stop) switch slide is on ► (Run).

 
 
2. IF THE SPEED OF THE TRAIN IS UNEVEN

- a. Make sure that all track connections are level.
- b. Make sure that the tracks are set on a flat and stable surface.
- c. Make sure that the wheels and tracks are clean, free from dirt, loose particles, fiber, etc. (Always use a soft clean cloth for wiping).
- d. Make sure batteries are useable.

2. IF THE CHRISTMAS TREE ON THE SNOW GLOBE CAR DOES NOT ROTATE

- a. Make sure all wheels of all four cars are set securely on the tracks.

Configurations

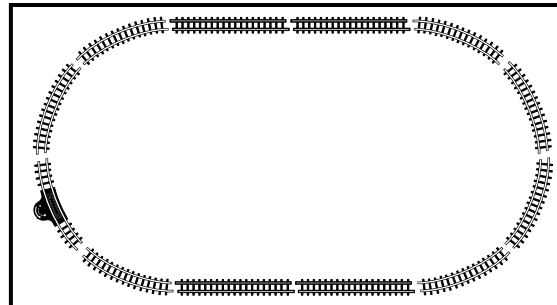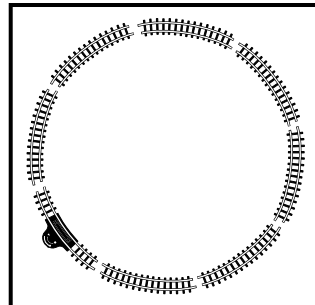

 The symbol on the product and/or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

 Le symbole sur le produit et les instructions signifie que l'équipement électrique et électronique doit être éliminé à la fin de son cycle de vie, et ce, séparément des déchets domestiques. Il existe des systèmes de collecte séparée pour le recyclage en Europe. Pour plus amples renseignements, veuillez communiquer avec les autorités locales ou le détaillant où le produit a été acheté.

 El símbolo impreso en el producto y/o en las instrucciones significa que los equipos eléctricos y electrónicos deben desecharse al terminar su vida útil en un lugar separado de los demás desechos domésticos. En la Unión Europea existen sistemas de recolección para reciclaje por separado. Para obtener más información, comuníquese con las autoridades locales o con el comercio donde adquirió el producto.

 Das Symbol auf dem Produkt und/oder in der Anleitung bedeutet, dass Ihr elektrisches und elektronisches Gerät am Ende der Lebensdauer getrennt vom Hausmüll entsorgt werden muss. Es gibt getrennte Sammelsysteme für Recycling in der EU. Mehr Informationen erhalten Sie bei der zuständigen Behörde oder dem Händler, von dem Sie das Produkt erworben haben.

 Het symbool op het product en/of in de instructies betekent dat uw elektrische en elektronische apparatuur aan het eind van de levensduur gescheiden van huishoudelijk afval moet worden ingeleverd. Er zijn afzonderlijke inzamelingssystemen voor recycling in de EU. Neem voor meer informatie contact op met de plaatselijke autoriteiten of met de winkelier waar u het product hebt gekocht.

 Il simbolo sul prodotto e/o nelle istruzioni significa che questa apparecchiatura elettrica ed elettronica deve essere smaltita, al termine della sua vita utile, separatamente dai rifiuti domestici. Nell'UE esistono sistemi di raccolta separati per il riciclo. Per maggiori informazioni contattare le autorità locali o il rivenditore presso cui è stato acquistato il prodotto.

- GB** • THIS IS NOT A TOY, THEREFORE NOT SUITABLE FOR CHILDREN.
 • **WARNING !** NOT SUITABLE FOR CHILDREN UNDER 3 YEARS DUE TO SMALL PARTS WHICH MAY POSE A CHOKING HAZARD.
 • FOR INDOOR USE ONLY.
- F** • CECI N'EST PAS UN JOUET, ET NE CONVIENT DONC PAS AUX ENFANTS.
 • **AVERTISSEMENT !** NE CONVIENT PAS AUX ENFANTS DE MOINS DE 3 ANS. RISQUE D'ASPHYXIE EN CAS D'INGESTION DE PETITS ÉLÉMENTS.
 • POUR UN USAGE À L'INTÉRIEUR SEULEMENT.
- ES** • ESTO NO ES UN JUGUETE, POR LO QUE NO ES ADECUADO PARA NIÑOS.
 • **¡PRECAUCIÓN!** NO PARA MENORES DE 3 AÑOS POR EL PEQUEÑO TAMAÑO DE LAS PIEZAS. RIESGO DE ASFIXIA.
 • SÓLO PARA USO EN INTERIORES.
- DE** • DIES IST KEIN SPIELZEUG UND DAHER NICHT FÜR KINDER GEEIGNET.
 • **ACHTUNG !** NICHT GEEIGNET FÜR KINDER UNTER 3 JAHREN. DIESES PRODUKT KANN KLEINTEILE ENTHALTEN. ERSTICKUNGSGEFAHR!
 • NUR FÜR DEN INNENBEREICH GEEIGNET.
- NL** • DIT IS GEEN SPEELGOED EN DAAROM NIET GESCHIKT VOOR KINDEREN.
 • **WAARSCHUWING!** NIET GESCHIKT VOOR KINDEREN JONGER DAN 3 JAAR VANWEGE KLEINE ONDERDELEN, GEVAAR VAN VERSTIKKING.
 • ALLEEN VOOR GEBRUIK BINNENSHUIS.
- IT** • QUESTO NON È UN GIOCATTOLO, PERTANTO NON È ADATTO AI BAMBINI.
 • **ATTENZIONE!** NON ADATTO AI BAMBINI INFERIORI AI 3 ANNI. CONTIENE PICCOLE PARTI CHE COMPORTANO RISCHIO DI SOFFOCAMENTO.
 • SOLO PER USO INTERNO.



DISTRIBUTED BY / DISTRIBUÉ PAR / DISTRIBUIDO POR
 VERTRIEBEN DURCH / GEDISTRIBUEERD DOOR / DISTRIBUITO DA

USA: LEMAX, INC.

25 PEQUOT WAY, CANTON, MA 02021

EUROPE: LEMAX-EUROPE B.V.

P.O. BOX 7, 2370 AA ROELOFARENDSVEEN, THE NETHERLANDS

AUSTRALIA/NEW ZEALAND: VIVENDI MARKETING PTY, LTD

5/252 ALLAMBIE ROAD ALLAMBIE HEIGHTS NSW 2100

UK REP OFFICE: LMX LTD.

139 CARLTON ROAD, WORKSOP, NOTTS, UK S81 7AD

MADE IN CHINA / FABRIQUÉ EN CHINE / HECHO EN CHINA

HERGESTELLT IN CHINA / GEFABRICIEERD IN CHINA / PRODOTTO IN CINA