









Instructions for #35028 The Holly Jolly Hotel, Battery-Operated

- Strip lights in different colors are on along cornices and edges of the hotel.
- Lighted Christmas tree and star.
- Street lamps light up.

OPERATING INSTRUCTIONS:

- Place the unit on flat, level surface.
 To operate, use three (3) "AA" size 1.5V batteries (not included) to be inserted in battery box (B) embedded at the back of the unit on Diagram 2.
 Switch on the power on right side of the unit by clicking the button to " " position (A) on Diagram 1.
- When activated, lights will illuminate the unit.
- The unit can also be operated by adaptor (not included). We recommend the use of a Lemax 4.5 Volt Type-L Adaptor. Insert the jack into the reception socket (C) at the back of the unit on Diagram 2. Plug the adaptor into a household electrical outlet. Remove batteries when use adaptor.

POWER:

- DC 4.5 V •155 mA

CAUTIONS:

- This is not a toy, therefore not suitable for children. Keep out of reach of children.
- Remove batteries if consumed or if product is left unused for a long time.

The symbol on the product and/or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product. PRINTED IN CHINA