


# nedis

## FNDK1xx10

### Mini Fan - USB powered

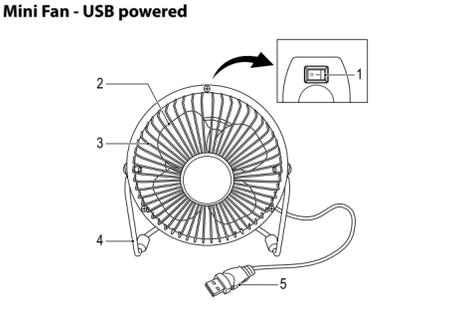

#### Description (fig. A)

- On/Off switch
- Fan
- Grille
- Base
- USB plug

#### Use

- Place the device on a stable, flat surface.
- Make sure that the on/off switch is in the off position.
- Connect the USB cable to the USB ports of the device and the computer. If you want to power the device using a USB adapter, make sure the adapter has a minimum power output of 1 A.
- To switch on the device, set the on/off switch to the on position.
- To adjust the angle, move the body of the fan up or down to the required position.
- To switch off the device, set the on/off switch to the off position.
- Disconnect the USB cable from the USB ports of the device and the computer.
- Allow the device to cool down completely.

#### Safety

- Read the manual carefully before use. Keep the manual for future reference.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- The manufacturer is not liable for consequential damages or for damages to property or persons caused by non-observance of the safety instructions and warnings of the device.
- Keep the device and the USB cable out of the reach of children. Children shall not play with the device.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
- Do not use the device outdoors. The device is suitable for indoor use only.
- The device is suitable for domestic use only. Do not use the device for commercial purposes.
- Keep the device away from heat sources. Do not place the device on hot surfaces or near open flames.
- Do not use the device near explosive or flammable materials.
- Use your hands away from the moving parts. Do not insert fingers, pencils or other objects through the grille or fan blades.
- Before moving the device, always remove the USB cable from the USB port on your computer.

#### Electrical safety



- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

#### Cleaning and maintenance

#### Warnings!

- When cleaning or maintenance, switch off the device, disconnect the USB cable from the USB ports of the device and the computer, and wait until the device has cooled down.
- Do not use cleaning solvents or abrasives.
- Do not clean the inside of the device.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
- Use a vacuum cleaner with a soft nozzle to remove dust from the grille and the fan, dry cloth.
- Clean the device using a brush, damp cloth. Thoroughly dry the device with a clean, dry cloth.

#### Beschrijving (fig. A)

- Aan/uit-schakelaar
- Ventilatorblad
- Rooster
- Bas
- USB-plug

#### Gebruik

- Plaats het apparaat op een stabiele, vlakke ondergrond.
- Zorg dat de aan/uit-knop in de uit-stand staat.
- Sluit de USB-kabel op de USB-poorten van het apparaat en de computer aan. Zorg dat u het apparaat met behulp van een USB-adaptor wilt voeden, zorg ervoor dat de adapter een minimum vermogen van 1 A heeft.
- Te gebruiken het apparaat in de aan-stand om het apparaat in te schakelen.
- Beweeg om de hoek van de schakelaar te passen het hoofdeel van de ventilator omhoog of omlaag naar de gewenste stand.
- Haal voordat u het apparaat gaat verplaatsen altijd de USB-kabel uit de USB-poort van de computer.
- Laat het apparaat volledig afkoelen.

#### Veiligheids

- Lees voor gebruik de handleiding zorgvuldig door. Bewaar de handleiding voor latere naslagingen.
- Gebruik het apparaat uitsluitend voor de beoogde doeleinden. Gebruik het apparaat niet voor andere doeleinden dan beschreven in de handleiding.
- Verantwoordelijk is niet aansprakelijk voor schade van welke aard ook die voortvloeit uit het gebruik van het apparaat, indien het niet nalezen van de veiligheidsinstructies en door verkeerd gebruik van het apparaat.
- Houd het apparaat en de USB-kabel buiten bereik van kinderen. Kinderen mogen niet met het apparaat spelen.
- Gebruik het apparaat alleen onder toezicht van de fabrikant of de fabrikant's autoriteit of een erkend servicepunt.
- Gebruik het apparaat niet buitenshuis. Het is niet toegestaan te gebruiken buitenshuis.
- Het apparaat is uitsluitend geschikt voor huishoudelijk gebruik. Gebruik het apparaat niet voor commerciële doeleinden.
- Gebruik het apparaat niet in de buurt van bewegende delen. Steek geen vingers, potloden of andere voorwerpen door het rooster of het ventilatorblad.
- Haal voordat u het apparaat gaat verplaatsen altijd de USB-kabel uit de USB-poort van de computer.

#### Elektrische veiligheid



- Gebruik het apparaat niet als de USB-kabel of de USB-stekker beschadigd of defect is. Laat een beschadigde of defecte USB-kabel of USB-stekker door de fabrikant of een erkend servicepunt vervangen.
- Controleer voor gebruik altijd de netspanning overeenkomstig met de spanning op het typeplaatje van het apparaat.
- Verplaats het apparaat niet door de USB-kabel te trekken. Zorg dat de USB-kabel niet in de war kan raken. Zorg dat de USB-kabel niet per ongeluk vastrekt kan raken en dat niemand hierover kan struikelen.
- Dompel het apparaat, de USB-kabel of de USB-stekker niet onder water of andere vloeistoffen.
- Laat het apparaat niet onbeheerd achter terwijl de USB-stekker op de USB-poorten van het apparaat en de computer is aangesloten.

#### Reiniging en onderhoud

#### Waarschuwing!

- Schakel het apparaat voordat u het werkt reinigen en onderhoudt uit, koppel de USB-kabel van de USB-poorten van het apparaat en de computer af en wacht tot het apparaat is afgekoeld.
- Gebruik geen reinigingsmiddelen of schuimende middelen.
- Reinig niet de binnenzijde van het apparaat.
- Probeer het apparaat niet te repareren. Indien het apparaat niet juist werkt, vervang het dan door een nieuw apparaat.
- Gebruik een stofzuiger met borstelmondstuk om stof van het rooster en het ventilatorblad te verwijderen.
- Reinig het apparaat met een zachte, vochtige doek. Droog het apparaat grondig af met een schone, droge doek.

#### Beschreibung (Abb. A)

- Ein-/Aus-Schalter
- Ventilatorflügel
- Schutzgitter
- Bas
- USB-Stecker

#### Gebrauch

- Stellen Sie das Gerät auf einer stabilen flachen Oberfläche auf.
- Überprüfen Sie sich, dass sich der Ein-/Aus-Schalter auf Position „off“ befindet.
- Verbinden Sie das USB-Kabel mit den USB-Anschlüssen des Computers. Falls Sie das Gerät mit Hilfe eines USB-Adapters mit Strom versorgen möchten, stellen Sie bitte sicher, dass der Adapter eine Mindestausgangsleistung von 1 A verfügt.
- Um den Geist einzuschalten, stellen Sie den Ein-/Aus-Schalter auf die Ein-Position.
- Um den Winkel anzupassen, bewegen Sie bitte den Rumpf des Ventilators in die gewünschte Position.
- Um das Gerät auszuschalten, stellen Sie den Ein-/Aus-Schalter auf die Aus-Position.
- Trennen Sie das USB-Kabel vom USB-Anschluss Ihres Computers.
- Lassen Sie das Gerät vollständig abkühlen.

#### Deutsch

- Avertissement!
  - Utilisez l'appareil uniquement pour son usage prévu. Ne l'utilisez pas pour d'autres fins que celles décrites dans le manuel.
  - Ne laissez pas l'appareil à l'abandon. Il est responsable de tous les dommages ou blessures consécutifs à l'usage non-respect des consignes de sécurité et d'une utilisation inappropriée de l'appareil.
  - Ne déplacez pas l'appareil en le tirant par le câble USB. Assurez-vous que le câble USB ne s'enchevêtre pas. Assurez-vous que le câble USB ne peut pas être piégé accidentellement ou faire trébucher.
  - Ne laissez pas l'appareil à l'abandon. Vous êtes responsable de tous les dommages ou blessures consécutifs à l'usage non-respect des consignes de sécurité et d'une utilisation inappropriée de l'appareil.
  - N'utilisez pas l'appareil sans surveillance alors que la fiche USB est connectée aux ports USB de l'appareil et de l'ordinateur.

#### Nettoyage et entretien

- Utilisez un aspirateur avec une embout à pression pour éliminer la poussière de la grille et la pale du ventilateur.
- Nettoyez l'appareil avec un chiffon doux et humide. Séchez soigneusement l'appareil avec un chiffon propre et sec.

#### Description (fig. A)

- Interruttore on/off
- Pala della ventola
- Griglia
- Base
- Connettore USB

#### Uso

- Collocare il dispositivo su una superficie stabile e piana.
- Verificare che l'interruttore on/off è impostato correttamente in posizione off.
- Collegare un cavo USB alla porta USB del dispositivo e del computer. Per alimentare il dispositivo utilizzando un adattatore USB, verificare che l'adattatore abbia una potenza di uscita minima di 1 A.
- Per accendere il dispositivo, posizionare l'interruttore on/off sulla posizione on.
- Per regolare l'angolo, spostare il corpo del ventilatore in alto o in basso nella posizione desiderata.
- Per spegnere il dispositivo, posizionare l'interruttore on/off sulla posizione off.
- Collegare il cavo USB dalle porte USB del dispositivo e del computer.
- Per raffreddare completamente il dispositivo.

- Verwenden Sie das Gerät nicht, falls das USB-Kabel oder der USB-Stecker beschädigt oder defekt ist. Ist das USB-Kabel oder der USB-Stecker beschädigt oder defekt, muss es/er vom Hersteller oder einem autorisierten Service-Partner ersetzt werden.
- Überprüfen Sie sich stets vor dem Gebrauch, dass die Netzspannung mit der Spannung auf dem Typenschild des Geräts übereinstimmt.
- Bewegen Sie das Gerät nicht durch Ziehen an USB-Kabel. Achten Sie darauf, dass sich USB-Kabel nicht verwickeln kann. Stellen Sie sicher, dass das USB-Kabel nicht versehentlich eingeklemmt werden kann oder man darüber stolpert.
- Tauchen Sie das Gerät, das USB-Kabel oder den USB-Stecker nicht in Wasser oder andere Flüssigkeiten ein.
- Lassen Sie das Gerät nicht unbeaufsichtigt, wenn der USB-Stecker mit den USB-Anschlüssen des Geräts und des Computers verbunden ist.

#### Reinigung und Pflege

- Warnung!**
- Verwenden Sie das Gerät nur für den vorgesehenen Zweck.
- Der Hersteller ist nicht schadenersatzpflichtig für Folgeschäden, Sachschäden oder Personenverletzungen, die durch die Nichtbeachtung der Sicherheits Hinweise und durch unsachgemäße Handhabung des Gerätes entstanden sind.
- Benutzen Sie das Gerät und das USB-Kabel außerhalb der Reichweite von Kindern auf. Kinder dürfen nicht mit dem Gerät spielen.
- Verwenden Sie das Gerät nicht, falls ein Teil beschädigt oder defekt ist. Ist das Gerät beschädigt oder defekt, erneuern Sie es unverzüglich.
- Verwenden Sie das Gerät nicht im Freien. Das Gerät eignet sich nur für Verwendung in Innenräumen.
- Das Gerät eignet sich nur für den Hausgebrauch. Verwenden Sie das Gerät nicht in den gewerblichen Gebrauch.
- Halten Sie das Gerät von Hitzequellen fern. Legen Sie das Gerät nicht auf heiße Oberflächen oder in die Nähe von offenen Flammen.
- Verwenden Sie das Gerät nicht in der Nähe von explosiven oder brennbaren Materialien.
- Halten Sie Hände von dem sich bewegendem Teilen fern. Stecken Sie nicht die Finger, Stifte oder andere Gegenstände durch das Schutzgitter oder den Ventilatorflügel.
- Ziehen Sie stets das USB-Kabel aus dem USB-Anschluss Ihres Computers heraus, bevor Sie das Gerät bewegen.

- Reinigen Sie das Gerät mit einem weichen Tuch. Trocknen Sie das Gerät gründlich mit einem sauberen Tuchchen ab.

- Utilizar un aspirador con una boquilla a soplado para eliminar la polviera de la rejilla y la pala del ventilador.
- Limpiar el dispositivo con un paño suave y húmedo. Secar completamente el dispositivo con un paño limpio y seco.

- Utilizzare il dispositivo su una superficie stabile e piana.
- Assicurarsi che l'interruttore di accensione/spago è impostato in posizione di spegnimento.
- Connettere il cable a USB ai portuetti USB del dispositivo e al computer. Se si desidera alimentare il dispositivo utilizzando un adattatore USB, assicurarsi che e adattatore tenga una potenza di uscita minima di 1 A.
- Per accendere il dispositivo, premere il interruttore di accensione/spago nella posizione di accensione.
- Per regolare l'angolo, muovere il corpo del ventilatore dritto o abajo a la posición deseada.
- Para apagar el dispositivo, presionar el interruptor de encendido/apagado en la posición de apagado.
- Desconecte el cable USB de los puertos USB del dispositivo y el ordenador.
- Deje que el dispositivo se enfríe completamente.

- Seguridad**
- Lea el manual detenidamente antes del uso. Conserve el manual en caso de futura necesidad.
- Utilice el dispositivo únicamente para su uso previsto. No utilice el dispositivo con una finalidad distinta a la descrita en el manual de instrucciones.
- El fabricante no es responsable de daños indirectos o de daños en la propiedad o en la personas causados por no seguir estas instrucciones de seguridad y por un uso no autorizado del dispositivo.
- Mantenga el dispositivo y el cable USB fuera del alcance de los niños. Los niños no pueden jugar con el dispositivo.
- No utilice el dispositivo si alguna pieza ha sufrido daños o tiene un defecto. Si el dispositivo ha sufrido daños o tiene un defecto, sustitúyalo inmediatamente.
- Mantenga el dispositivo alejado de fuentes de calor. No coloque el dispositivo sobre superficies calientes ni cerca de llamas abiertas.
- No utilice el dispositivo cerca de explosivos o materiales inflamables.
- Asegúrese de que el adaptador tenga una potencia de salida suficiente.
- Para ajustar el ángulo, mueva el cuerpo del ventilador dritto o abajo a la posición deseada.
- Desconecte el cable USB de los puertos USB del dispositivo y el ordenador.
- Deje que el dispositivo se enfríe completamente.

- Do not use the device if any part is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

#### Sicherheit

- Lesen Sie die Bedienungsanleitung vor dem Gebrauch genau durch. Bitte bewahren Sie die Bedienungsanleitung zur späteren Bezugnahme auf.
- Verwenden Sie das Gerät nur bestimmungsgemäß. Verwenden Sie das Gerät nur für den in dieser Bedienungsanleitung beschriebenen Zweck.
- Der Hersteller ist nicht schadenersatzpflichtig für Folgeschäden, Sachschäden oder Personenverletzungen, die durch die Nichtbeachtung der Sicherheits Hinweise und durch unsachgemäße Handhabung des Gerätes entstanden sind.
- Benutzen Sie das Gerät und das USB-Kabel außerhalb der Reichweite von Kindern auf. Kinder dürfen nicht mit dem Gerät spielen.
- Verwenden Sie das Gerät nicht, falls ein Teil beschädigt oder defekt ist. Ist das Gerät beschädigt oder defekt, erneuern Sie es unverzüglich.
- Verwenden Sie das Gerät nicht im Freien. Das Gerät eignet sich nur für Verwendung in Innenräumen.
- Das Gerät eignet sich nur für den Hausgebrauch. Verwenden Sie das Gerät nicht in den gewerblichen Gebrauch.
- Halten Sie das Gerät von Hitzequellen fern. Legen Sie das Gerät nicht auf heiße Oberflächen oder in die Nähe von offenen Flammen.
- Verwenden Sie das Gerät nicht in der Nähe von explosiven oder brennbaren Materialien.
- Halten Sie Hände von dem sich bewegendem Teilen fern. Stecken Sie nicht die Finger, Stifte oder andere Gegenstände durch das Schutzgitter oder den Ventilatorflügel.
- Ziehen Sie stets das USB-Kabel aus dem USB-Anschluss Ihres Computers heraus, bevor Sie das Gerät bewegen.

#### Elektrische Sicherheit



- Verwenden Sie das Gerät nicht, falls das USB-Kabel oder der USB-Stecker beschädigt oder defekt ist. Ist das USB-Kabel oder der USB-Stecker beschädigt oder defekt, muss es/er vom Hersteller oder einem autorisierten Service-Partner ersetzt werden.
- Überprüfen Sie sich stets vor dem Gebrauch, dass die Netzspannung mit der Spannung auf dem Typenschild des Geräts übereinstimmt.
- Bewegen Sie das Gerät nicht durch Ziehen an USB-Kabel. Achten Sie darauf, dass sich USB-Kabel nicht verwickeln kann. Stellen Sie sicher, dass das USB-Kabel nicht versehentlich eingeklemmt werden kann oder man darüber stolpert.
- Tauchen Sie das Gerät, das USB-Kabel oder den USB-Stecker nicht in Wasser oder andere Flüssigkeiten ein.
- Lassen Sie das Gerät nicht unbeaufsichtigt, wenn der USB-Stecker mit den USB-Anschlüssen des Geräts und des Computers verbunden ist.

#### Reinigung und Pflege

- Warnung!**
- Verwenden Sie das Gerät nur für den vorgesehenen Zweck.
- Der Hersteller ist nicht schadenersatzpflichtig für Folgeschäden, Sachschäden oder Personenverletzungen, die durch die Nichtbeachtung der Sicherheits Hinweise und durch unsachgemäße Handhabung des Gerätes entstanden sind.
- Benutzen Sie das Gerät und das USB-Kabel außerhalb der Reichweite von Kindern auf. Kinder dürfen nicht mit dem Gerät spielen.
- Verwenden Sie das Gerät nicht, falls ein Teil beschädigt oder defekt ist. Ist das Gerät beschädigt oder defekt, erneuern Sie es unverzüglich.
- Verwenden Sie das Gerät nicht im Freien. Das Gerät eignet sich nur für Verwendung in Innenräumen.
- Das Gerät eignet sich nur für den Hausgebrauch. Verwenden Sie das Gerät nicht in den gewerblichen Gebrauch.
- Halten Sie das Gerät von Hitzequellen fern. Legen Sie das Gerät nicht auf heiße Oberflächen oder in die Nähe von offenen Flammen.
- Verwenden Sie das Gerät nicht in der Nähe von explosiven oder brennbaren Materialien.
- Halten Sie Hände von dem sich bewegendem Teilen fern. Stecken Sie nicht die Finger, Stifte oder andere Gegenstände durch das Schutzgitter oder den Ventilatorflügel.
- Ziehen Sie stets das USB-Kabel aus dem USB-Anschluss Ihres Computers heraus, bevor Sie das Gerät bewegen.

- Reinigen Sie das Gerät mit einem weichen Tuch. Trocknen Sie das Gerät gründlich mit einem sauberen Tuchchen ab.

- Utilizar un aspirador con una boquilla a soplado para eliminar la polviera de la rejilla y la pala del ventilador.
- Limpiar el dispositivo con un paño suave y húmedo. Secar completamente el dispositivo con un paño limpio y seco.

- Utilizzare il dispositivo su una superficie stabile e piana.
- Assicurarsi che l'interruttore di accensione/spago è impostato in posizione di spegnimento.
- Connettere il cable a USB ai portuetti USB del dispositivo e al computer. Se si desidera alimentare il dispositivo utilizzando un adattatore USB, assicurarsi che e adattatore tenga una potenza di uscita minima di 1 A.
- Per accendere il dispositivo, premere il interruttore di accensione/spago nella posizione di accensione.
- Per regolare l'angolo, muovere il corpo del ventilatore dritto o abajo a la posición deseada.
- Para apagar el dispositivo, presionar el interruptor de encendido/apagado en la posición de apagado.
- Desconecte el cable USB de los puertos USB del dispositivo y el ordenador.
- Deje que el dispositivo se enfríe completamente.

- Seguridad**
- Lea el manual detenidamente antes del uso. Conserve el manual en caso de futura necesidad.
- Utilice el dispositivo únicamente para su uso previsto. No utilice el dispositivo con una finalidad distinta a la descrita en el manual de instrucciones.
- El fabricante no es responsable de daños indirectos o de daños en la propiedad o en la personas causados por no seguir estas instrucciones de seguridad y por un uso no autorizado del dispositivo.
- Mantenga el dispositivo y el cable USB fuera del alcance de los niños. Los niños no pueden jugar con el dispositivo.
- No utilice el dispositivo si alguna pieza ha sufrido daños o tiene un defecto. Si el dispositivo ha sufrido daños o tiene un defecto, sustitúyalo inmediatamente.
- Mantenga el dispositivo alejado de fuentes de calor. No coloque el dispositivo sobre superficies calientes ni cerca de llamas abiertas.
- No utilice el dispositivo cerca de explosivos o materiales inflamables.
- Asegúrese de que el adaptador tenga una potencia de salida suficiente.
- Para ajustar el ángulo, mueva el cuerpo del ventilador dritto o abajo a la posición deseada.
- Desconecte el cable USB de los puertos USB del dispositivo y el ordenador.
- Deje que el dispositivo se enfríe completamente.

- Do not use the device if any part is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not touch the device by pulling the USB cable. Make sure that the USB cable cannot become entangled. Make sure that the USB cable cannot be caught accidentally or tripped over.
- Do not immerse the device, the USB cable or the USB plug in water or other liquids.
- Do not leave the device unattended while the USB plug is connected to the USB ports of the device and the computer.

- Do not use the device if the USB cable or USB plug is damaged or defective. If the USB cable or USB