

**English - Description**

The kettle is a device used for boiling water. The device is not suitable for boiling liquids other than water. The maximum capacity of the kettle is 1.7 liters.

1. On/off button / On/off indicator

2. Water level indicator

3. Spout

4. Anti-scale filter

5. Lid

6. Handgrip

7. Base

**Safety****General safety**

Read the manual carefully before use. Keep the manual for future reference.

The manufacturer is not liable for consequential damages or for damages to property or persons caused by non-observance of the safety instructions and use of the device.

The device is not suitable for use by persons with reduced physical, sensory, mental or motor skills or lack of experience and knowledge. The device must not be operated by children unless they are older than 8 years and supervised. Keep the device and the mains cables out of the reach of children younger than 8 years. Children must not play with the device.

Only use the device for its intended purpose. Do not use the device for other purposes than described in the manual.

Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.

The device is suitable for indoor use only. Do not use the device outdoors.

The device is suitable for domestic use only. Do not use the device for professional purposes.

Do not immerse the device in water or other liquids. Do not remove the device from water or other liquids, do not remove the device with your hands. Immediately remove the mains plug from the wall socket. If the device is immersed in water or other liquids, clean the device again.

Only use the device in frost-free environments.

Place the device on a stable, flat surface.

Place the device on a heat-resistant and splash-proof surface.

Do not place the device on a hot surface.

Do not touch the device.

Make sure that there is sufficient space around the device to allow heat to escape and provide sufficient ventilation.

Keep the device away from sources of heat. Do not place the device on hot surfaces or near open flames.

Remove parts. Accessible surfaces can become hot when the device is operating.

Be careful with hot water and steam to avoid burns.

Do not touch the device while it is switched on or is still hot. Remove the mains plug from the wall socket and allow the device to cool down completely.

Only use the device with the supplied base.

Only switch on the device when it is filled with water.

**Electrical safety****CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN**

To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required. Disconnect the product from the mains and other equipment if a problem should occur.

Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.

Before connecting the device, make sure that the voltage as indicated on the rating plate of the device.

Connect the device to an earthed wall socket. If necessary, use an earthed extension cable of a suitable diameter.

Always fully unwind the mains cable and the extension cable.

The device is not intended to be operated by means of an external timer or separate remote-control system.

The device is not intended to be operated by means of an external timer or separate remote-control system.

Do not connect the device to an electrical circuit that has been tampered with.

Do not immerse the device in water or other liquids. If the device is immersed in water or other liquids, do not remove the device with your hands. Immediately remove the mains plug from the wall socket. If the device is immersed in water or other liquids, clean the device again.

Only use the device in frost-free environments.

Place the device on a stable, flat surface.

Place the device on a heat-resistant and splash-proof surface.

Do not place the device on a hot surface.

Do not touch the device.

Make sure that there is sufficient space around the device to allow heat to escape and provide sufficient ventilation.

Keep the device away from sources of heat. Do not place the device on hot surfaces or near open flames.

Remove parts. Accessible surfaces can become hot when the device is operating.

Be careful with hot water and steam to avoid burns.

Do not touch the device while it is switched on or is still hot. Remove the mains plug from the wall socket and allow the device to cool down completely.

Only use the device with the supplied base.

Only switch on the device when it is filled with water.

**Electrical safety****CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN**

Do not open the lid during use.

Before filling the kettle with water, remove the kettle from the base.

Only use cold tap water. Do not use carbonated water or other liquids.

Make sure that the water level does not exceed the maximum mark on the water level indicator. If the water level is above the maximum mark, the kettle will boil over and hot water will spray out.

Do not remove the kettle from the base until the device has been switched off.

Remove the kettle from the base.

Open the lid.

Fill the kettle with water.

Close the lid.

Place the kettle onto the base.

Insert the mains plug into the wall socket.

To switch the device, set the on/off switch to the "I" position. The on/off indicator comes on. The device starts boiling.

If the process is completed, the device switches off automatically. The on/off indicator goes off.

Remove the mains plug from the wall socket.

Allow the device to cool down completely.

**Cleaning and maintenance****Warning!**

Before cleaning or maintenance, switch off the device, remove the mains plug from the wall socket and wait until the device has cooled down.

Do not immerse the device in water or other liquids.

Do not clean the device or accessories in the dishwasher.

Do not use cleaning solvents or abrasives.

Do not use sharp objects.

Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.

Regularly remove lime scale deposits from the device using a suitable descaling agent.

Clean the outside of the device using a soft, damp cloth. Thoroughly dry the outside of the device with a clean, dry cloth.

**Support**

If you need further help or have comments or suggestions please visit [www.nedis.com/support](http://www.nedis.com/support)

**Nederlands - Beschrijving**

De waterkoker is een apparaat dat wordt gebruikt voor het koken van water. Het apparaat is niet geschikt voor het koken van andere vloeistoffen dan water. De maximinhoud van de waterkoker is 1,7 liter.

1. On/Aus-Taste / Ein/Aus-Anzeige

2. Wasserniveau-indicator

3. Tuit

4. Antikalkfilter

5. Deckel

6. Handgrip

7. Basis

**Veiligheid****Algemene veiligheid**

Lees de gebruiksaanwijzing voor alle veiligheidsvoorschriften.

De fabrikant is niet aansprakelijk voor schade die veroorzaakt is door het niet naleven van de gebruiksaanwijzing en door verkeerd gebruik van het apparaat.

Het apparaat kan worden gebruikt door kinderen vanaf 8 jaar en voor personen met een lichamelijke, zintuiglijke, geestelijke of motorische handicaps of zonder de benodigde ervaring en kennis indien ze deze kunnen begrijpen en kunnen toepassen. De gebruiksaanwijzing moet worden gelezen en begrepen voordat het gebruik begint. Rekening moet worden gehouden met de specifieke gezondheid en levensomstandigheden van de gebruiker.

Gebruik het apparaat niet als het is verbonden met een stopcontact. Gebruik het apparaat niet langer als het is ondergedompeld in water of ander vloeistoffen.

Gebruik het apparaat alleen in voorstelbare omgevingen.

Plaats het apparaat niet in contact met warme oppervlakken of oppervlakken die mogelijk kunnen ontbranden.

Zorg dat de netstekker uit de stopcontacten wordt verwijderd.

Gebruik het apparaat niet op een oppervlak dat niet geschikt is voor de temperatuur.

Verwijder de netstekker uit de stopcontacten.

Gebruik het apparaat niet voor bediening met behulp van een elektrisch gereedschap.

Gebruik het apparaat niet als het is oververhit.

